



IFD8510 RS-485/RS-422 Isolated Repeater

User's Manual

INTRODUCTION:

The Delta IFD8510 repeater simply amplifies, or boots, existing RS-485/RS-422 signals to enable them to cover longer distances. It extends the communication distance by 4000ft(1200m) or extends the number of connected nodes by 32. Support RS-485 half-duplex and RS-422 full-duplex communication, and can automatically senses the direction of data flow and switches the transmission direction.

SPECIFICATIONS:


- 1.Power Requirement : +9V – +35Vdc.
- 2.Power Consumption : 1.6W.
- 3.Isolated Voltage : 3000Vdc.
- 4.Baud Rate : 1200,2400,4800,9600,19200,38400,57600 or 115200bps.
- 5.RS-485/RS-422 Terminal Type : 10PIN · AWG1-#12 to #24 wires accepted.
- 6.Dimension (L x W x H) : 4.80in x 2.79in x 0.87in (122mm x 71mm x 22mm).
- 7.Weight : 0.31lb (140 g).

INSTALLATION:

1.ACCESSORY

- Mounting Panel x1.
- User Manual x 1.

2.APEARANCE

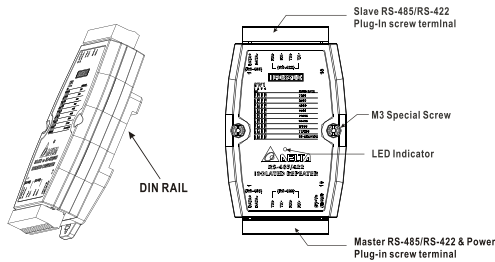

3.DATA FORMAT SETTING :

Set baud rate and data format to control the data flow

Baud rate	SW1				Baud rate	SW1			
	1	2	3	4		1	2	3	4
1200bps	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	38400bps	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
2400bps	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	57600bps	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
4800bps	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	115200bps	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
**9600bps	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	RS-422 Mode	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
19200bps	ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>					

Length	SW2		Length	SW2	
	1	2		1	2
9bit	ON	<input type="checkbox"/>	11 bit	ON	<input type="checkbox"/>
**10 bit	ON	<input type="checkbox"/>	12 bit	ON	<input type="checkbox"/>

Notes : **default setting.

Calculation for length of data frame :

LENGTH = START BIT + DATA LENGTH + PARITY BIT + STOP BIT

Ex : DATA LENGTH = 8 bits · None parity · STOP BIT = 1bit


LENGTH = 1 + 8 + 0 + 1 = 10

4.TERMINATION RESISTOR

The action to terminate the cable is system dependent and is affected by the choice of the maximum cable length and signal rate. The length of RS-485 network cable can be extended up to 4000 ft or 1.2km. It is necessary to match the line impedance of network to avoid signal distortion by adding to termination resistors on both ends of RS-485/RS-422 network cable.

Hint for termination resistor :

- The longer the length of transmission cable , the worse the signal quality.
- Two transmission resistors are recommended to install on both ends of the main cable of RS-485/RS-422 network . It's not necessary to add termination resistors on each nodes in the same network.

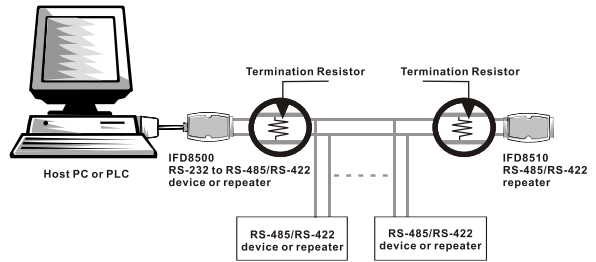

c.If the transmission wire of RS-485 is using AWG#24 twisted pair cable with 1.2km, We recommend you to use 120 Ohm resistor.

5.CONNECTORS PINS ASSIGNMENT

a. Master RS-485/RS-422 interface connector: plug-in screw terminal Plug-in screw terminal wiring: Accepts AWG 1-#12 to #24 wires.

Pin Description :

PIN	Signal Name	PIN	Signal Name
1	RS-485 DATA+	6	RS-422 RX+
2	RS-485 DATA-	7	RS-422 RX-
3	NC	8	NC
4	RS-422 TX+	9	+VS(POWER)
5	RS-422 TX-	10	GND(GROUND)

b. Slave RS-485/RS-422 interface connector: plug-in screw terminal Plug-in screw terminal wiring: Accepts AWG 1-#12 to #24 wires .

Pin Description :


PIN	Signal Name	PIN	Signal Name
1	RS-485 DATA+	6	RS-422 TX+
2	RS-485 DATA-	7	RS-422 TX-
3	-NC	8	NC
4	RS-422 RX+	9	NC
5	RS-422 RX-	10	NC

Notes :


1. IFD8510 provides 50Vdc reverse power protection .
2. To reduce interference , it is recommend using twisted pair cable .

6.MOUNTING METHOD


a. DIN Rail

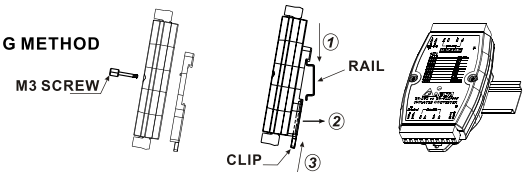

b. Panel Mount

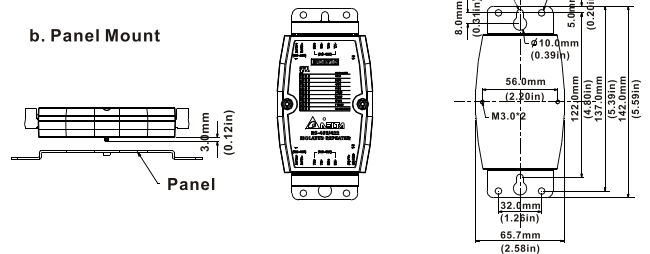

c. Piggy back

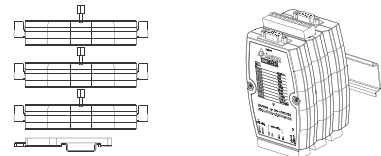

OPERATION :

1.LED Display

Green LED "ON " for power indicator

Red LED "Flash " for received data from master RS-485/RS-422 terminal

Green LED "Flash " for data received data from slave RS-485/RS-422 terminal.

2.Data transfer with RS-485

The RS-485 allows for multiple drivers and receivers on single cable, facilitating half duplex communication . Before sending data to RS-485 bus cable, Programmer has to make sure there is no data transmitted on the bus, else you will lose your data.

3.Wiring

Before using this module in a network, the module should be properly wiring connected. The following diagram shows the wiring layout.

